SIEMENS

LITHOSTAR MODULARIS

SP

Installation and Startup

System

Installation of Elbow Supports

© Siemens AG 2005
The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Print No.: SPL1-130.814.04.01.02
Replaces: n.a.

English
Doc. Gen. Date: 02.05

Document revision level

The document corresponds to the version/revision level effective at the time of system delivery. Revisions to hardcopy documentation are not automatically distributed.

Please contact your local Siemens office to order current revision levels.

Disclaimer

The installation and service of equipment described herein is to be performed by qualified personnel who are employed by Siemens or one of its affiliates or who are otherwise authorized by Siemens or one of its affiliates to provide such services.

Assemblers and other persons who are not employed by or otherwise directly affiliated with or authorized by Siemens or one of its affiliates are directed to contact one of the local offices of Siemens or one of its affiliates before attempting installation or service procedures.

Table of Contents 3

1 Installation of Elbow Supports 4

Work steps to be performed 4
Scope of the instructions. 4
Safety information 4
Required tools, measurement and auxiliary devices 4
Replacing the bushings. 4
Installing the elbow supports. 5
Final work steps 5

Work steps to be performed

Scope of the instructions

These instructions apply to the installation of elbow supports on the LITHOSTAR Modularis Uro.

Safety information

NOTE

When performing work steps, observe the product-specific safety information in the documents as well as the general safety information contained in ARTD part 2.

Required tools, measurement and auxiliary devices

Tool kit

Loctite 221

Replacing the bushings

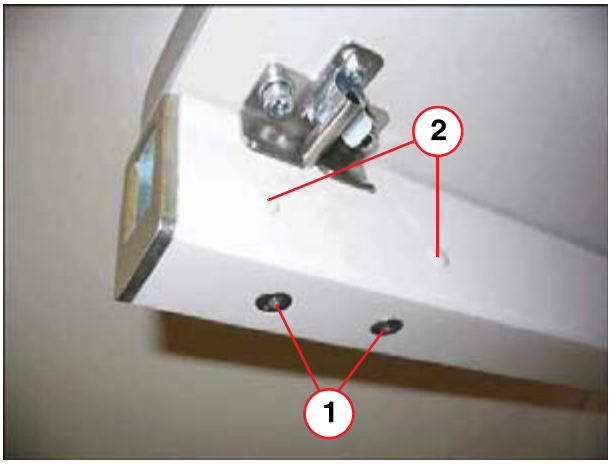

Fig. 1:

- Remove the two screws (1/Fig. 1 / p. 4).
- Remove the two caps (2/Fig. 1 / p. 4).
- Remove the bushing from the bar. Remove any silicone remains.

Fig. 2:

- Insert the new holder.
- Secure the holder from below and tighten the screws with Loctite 221.
- Also replace the bushing on the other side of the table.

Installing the elbow supports

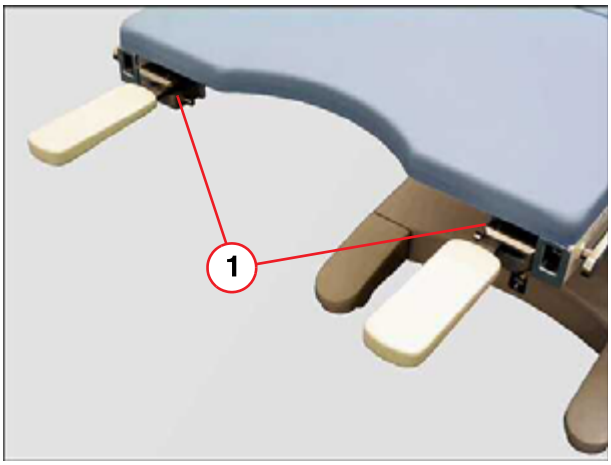

Fig. 3:

- Use two M6x25 screws and A6.4 washers to secure the arm supports (1/Fig. 3 / p. 5) to both sides. Use Loctite 221 to tighten the screws.

Final work steps

- Distribute the operating instructions to the personnel.
- After all work has been completed, perform the ground wire test according to ARTD-002.731.17... The ground wire resistance must not exceed 0.2 ohm.
- File these instructions in the system folder of the product.